
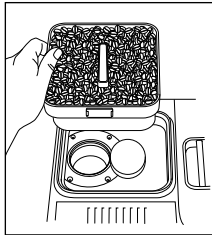
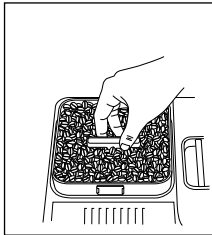


SWAPPABLE HOPPER

Enjoy using different bean types and flavours with the easily removable, zero-retention hopper.

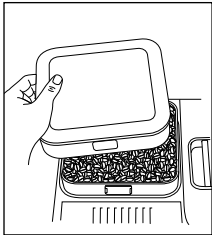

NOTE: You may notice when fitting your hopper that it feels unsteady, or wobbles easily. The hopper sits on the arm of a scale, which has to be free moving so that the machine can accurately measure how much coffee is being ground. This wobbling is normal, however refrain from pushing down too hard to avoid damaging the delicate scale below the arm.

HOPPER SELECTION

When swapping to a second hopper, store the first hopper with the lid on either in the storage base (available for purchase at **AU** ninjakitchen.com.au | **NZ** ninjakitchen.co.nz) or in a cool, dry place.

Whenever a hopper is locked on the machine, you'll be prompted to confirm which hopper is on the machine. The hopper name is labeled on the front of the hopper.

1. When a hopper is placed on the machine, the control panel will display the last installed hopper.
2. If needed, press the arrows to change the hopper between HOP1 and HOP2 depending on the number labeled on the hopper that is in the machine.
3. Press the **START** button to confirm. The machine will beep to confirm the selection.

It is recommended to run a GRIND iQ cycle whenever filling a hopper with new beans. Refer to the GRIND iQ section in the Owner's Guide to learn more.

REMOVABLE HOPPER LABELLING

Each hopper will come with a reversible label with 1 & 2 on each side. These slide into the front of the hopper and can be seen through the window of the hopper lid.