


Shark

POWERDETECT

Robotic Vacuum Cleaner

**RV3020XEWHANZ / RV3023XEIVANZ /
RV3024XEPUANZ / RV3025XEBLANZ SERIES**

SAFETY & WARNING INSTRUCTIONS

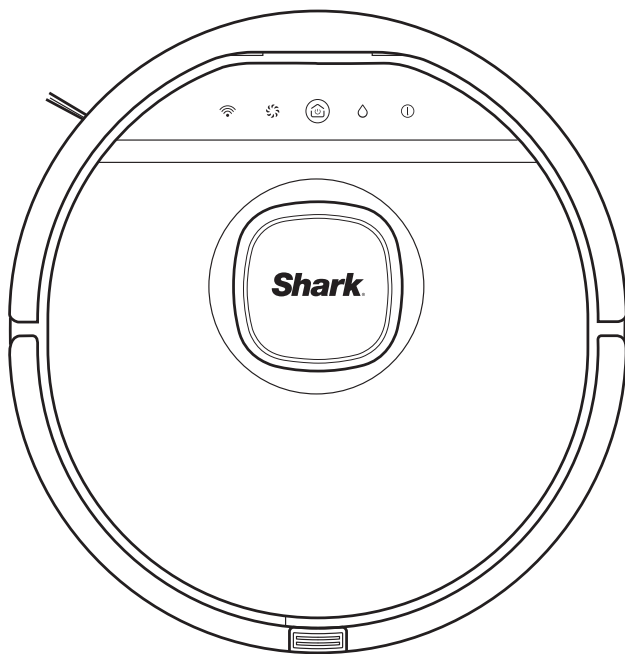

SHARKCLEAN APP



Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.



sharkclean.com.au | sharkclean.co.nz



IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

⚠ WARNING

To reduce the risk of fire, electric shock, injury, or property damage:

CHILDREN OR ANIMALS SHOULD NOT BE LEFT UNATTENDED IN ANY ROOMS
THAT THE ROBOTIC VACUUM HAS ACCESS TO DURING CLEANING.

LASER WARNING

THIS PRODUCT HAS A CLASS 1 LASER. ALWAYS TURN OFF THE POWER BEFORE LIFTING THE ROBOTIC VACUUM CLEANER OR PERFORMING ANY MAINTENANCE ON IT. DO NOT LOOK DIRECTLY INTO LASER.

IF THE CHARGING CABLE PLUG DOES NOT FIT FULLY INTO THE SOCKET, CONTACT A QUALIFIED ELECTRICIAN. DO NOT FORCE INTO SOCKET OR TRY TO MODIFY TO FIT.

GENERAL WARNINGS

When using an electrical appliance, basic precautions should always be followed, including the following:

- This appliance consists of a Robot Floor Cleaner vacuum and charging dock with power supply. These components contain electrical connections, electrical wiring, and moving parts that potentially present risk to the user.
- Before each use, carefully inspect all parts for any damage. If a part is damaged, discontinue use.
- Use only identical replacement parts.
- This Robot Floor Cleaner contains no serviceable parts.
- Use only as described in this manual. DO NOT use Robot Floor Cleaner for any purpose other than those described in this manual.
- With the exception of some filters and dust bin, DO NOT expose any parts of the robotic vacuum cleaner to water or other liquids.
 DO NOT touch hot surfaces directly after cleaning missions.
- DO NOT put hands into any opening in the dock or robot.**

USE WARNINGS

- This product has a Class 1 Laser. Always turn off the power before lifting the robotic vacuum cleaner or performing any maintenance on it.
- DO NOT** look directly into laser.
- DO NOT** look directly into UV light.
- DO NOT** damage the UV lens. The UV lens cannot be replaced. If the lens is damaged the appliance should be scrapped.
- Always turn off the robotic vacuum cleaner before inserting or removing the filter or dustbin.
- DO NOT** handle plug, charging dock, charging cable or Robot Floor Cleaner with wet hands. Cleaning and user maintenance must not be done by children without supervision
- Children should **NOT** play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- DO NOT** use the robot without the dustbin, filter in place.
- DO NOT** damage the charging cord:
 - DO NOT** pull or carry charging dock by the cord or use the cord as a handle.
 - DO NOT** unplug by pulling on cord. Grasp the plug, not the cord.
 - DO NOT** close a door on the cord, pull the cord around sharp corners, or leave the cord near heated surfaces.
 - The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- DO NOT** put any objects into nozzle or accessory openings. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- DO NOT** use if Robot Floor Cleaner airflow is restricted. If the air paths become blocked, turn the vacuum cleaner off and remove all obstructions before turning on the unit again.
- Keep nozzle and all vacuum openings away from hair, face, fingers, uncovered feet, or loose clothing.
- DO NOT** use if Robot Floor Cleaner is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
- DO NOT** place vacuum cleaner on unstable surfaces.
- DO NOT** use to pick up:
 - Liquids.
 - Large objects.
 - Hard or sharp objects (glass, nails, screws, or coins).
 - Large quantities of dust (drywall dust, fireplace ash, or embers.)
 - DO NOT use as an attachment to power tools for dust collection.
 - Smoking or burning objects (hot coals, cigarette butts, or matches).
 - Flammable or combustible materials (lighter fluid, petrol, or kerosene).
 - Toxic materials (chlorine bleach, ammonia, or drain cleaner).
 - Toxic materials (high concentrations of chlorine bleach liquid, high concentrations of ammonia, or drain cleaning solution).

24. DO NOT use in the following areas:

- Wet or damp surfaces
 - Outdoor areas near fireplaces with unobstructed entrances
 - Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, petrol, kerosene, paint, paint thinners, mothproofing substances, or flammable dust
 - In an area with a space heater
 - Near fireplaces with unobstructed entrances.
- Remove all spilled or leaked liquid from the base or floor as it could lead to risk of electrical shock and/or floor damage.
 - Turn off the Robot Floor Cleaner before any adjustment, cleaning, maintenance or troubleshooting. Note: in the OFF (O) position, the robot still uses a small amount of power.
 - Allow all filters to air-dry completely before reinstalling them to prevent liquid from being drawn into electric parts.
 - DO NOT** modify or attempt to repair the robotic vacuum cleaner or the battery yourself, except as indicated in this Owner's Guide. **DO NOT** use the vacuum if it has been modified or damaged.
 -  Keep fingers clear of wheels and suspension system while robot is powered on at all times.
 - DO NOT** use any household cleaners (all-purpose cleaners, glass cleaners, bleach) on any of the polished high gloss surfaces on the docking station or robot vacuum cleaner as they contain chemicals that may damage these surfaces. Instead use a cloth dampened with water to gently clean.
 - To avoid water tank deformation, do not add hot water in the tank, only room temperature water. If water marks remain on the water tank, wipe them clean before reinstallation.
 - To minimise the risk of the robot traveling beyond an unsafe boundary (stair or cliff edges, fireplaces, water hazards), establish these areas as no-go zones using the mapping feature in the SharkClean mobile app. Upon setting the boundary, run the vacuum and visually confirm that the settings effectively prevent the robot from passing beyond the set boundary. Adjust settings as necessary. For nonapp users, use a boundary to block off an unsafe boundary.

Unit	Battery
SKU	RVBAT85014 (50E)

BATTERY USE

- The battery is the power source for the vacuum. Carefully read and follow all charging instructions.
- To prevent unintentional starting, ensure the vacuum is powered off before picking it up or carrying it.
- Use only the SHARK charging dock and battery outlined in the table below. and use only battery RVBAT85014 (50E). Use of batteries or battery chargers other than those indicated may create a risk of fire.
- Keep the battery away from all metal objects such as paper clips, coins, keys, nails, or screws. Shorting the battery terminals together increases the risk of fire or burns.
- Under abusive conditions, liquids may be ejected from the battery. Avoid contact with this liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
- Robotic vacuum cleaner should not be stored, charged, or used at temperatures below 10°C (50°F) or above 40°C (104°F). Ensure the battery and vacuum have reached room temperature before charging or use. Exposing the robot or battery to temperatures outside of this range may damage the battery and increase the risk of fire.
- DO NOT** expose the Robot Floor Cleaner or battery to fire or temperatures above 130°C (265°F) as it may cause explosion.

Battery usage conditions:

<10 °C (50 °F)	Do not store.
>40 °C (104 °F)	Do not store.
20 °C — 40 °C	Normal operating temp.
<0 °C (32 °F)	Do not charge.

- Do not use the mop function on unsealed floors.
- Warning: against recharging non-rechargeable batteries.
- The product intended for charging for robot vacuum cleaner with Li-ion battery pack: DC 14.6V, Rated capacity: 4750mAh

Unit SKU	Dock
RV3020XEWHANZ RV3023XEIVANZ RV3024XEPUANZ RV3025XEBLANZ	XDRV3000XEANZ XDOCR3023ANZ XDOCR3024ANZ XDOCR3025ANZ

SAVE THESE INSTRUCTIONS

For the latest warnings and cautions, go to sharkclean.com.au or sharkclean.co.nz

ONE (1) YEAR LIMITED WARRANTY

For warranty claims, you must submit proof of purchase in the form of a valid receipt that shows the date and place of purchase. This 1-year manufacturer's warranty is valid from the date of purchase and applies where your product becomes defective due to faulty materials or workmanship.

Where an item or component is replaced, the replacement item will be covered for the remaining balance of the original 1-year warranty period. Your statutory rights under the Australian Consumer Law (**ACL**) and Consumer Guarantees Act 1993 (**CGA**) may apply beyond the 1-year period, and nothing in this warranty limits those rights.

This warranty does not replace but is in addition to your statutory rights:

- For New Zealand Consumers: If your product is faulty, you are entitled to remedies under the Consumer Guarantees Act 1993. Where a defect exists, we will repair or replace the faulty part free of charge, or, where a repair or replacement is not reasonable or available, replace the unit with an equivalent or upgraded model. CGA rights apply automatically and continue after this warranty expires.
- For Australian Consumers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Nothing in this warranty excludes, restricts, or modifies any rights you may have to compensation for consequential loss under the ACL or CGA. Attempts to exclude these rights may be misleading and are prohibited.

Your warranty is subject to the following conditions

- DO NOT operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident

Customer costs within warranty

The customer is responsible for any inbound freight charges for returning a product for assessment and any outbound freight charges for repair, warranty parts or replacement units.

This does not affect your rights under the ACL or CGA where the law requires us to bear reasonable costs associated with a remedy.

Who is covered?

This warranty applies only to the original purchaser, who bought the product from an authorised retailer and non-transferrable. Proof of purchase is required.

What is not covered?

- Accessories supplied with the item.
- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.

ONE (1) YEAR LIMITED WARRANTY

This warranty against defects is provided by:

SharkNinja Pty Ltd ABN 87 147 260 197

Address: Suite 23.03, Level 23, 45 Clarence Street, Sydney NSW 2000

Phone: (+61) 2 8801 7666

Email: customerservice@sharkclean.com.au

We will assess the goods and provide a repair, replacement, or refund in accordance with this warranty and your rights under the ACL or CGA.

How to make a claim

1. Contact us at customerservice@sharkclean.com.au
2. Provide proof of purchase and a description of the issue.
3. You may be asked for photos or to return the product for inspection.
4. We will assess whether the defect falls within this warranty and provide the appropriate remedy (repair, replacement, or refund) according to the ACL or CGA.

NOTES

NOTES

SHARKNINJA PTY. LTD.
Suite 23.02, Level 23, 45 Clarence St,
Sydney NSW 2000 Australia
sharkclean.com.au
AUS 02 8801 7666

SharkNinja New Zealand LTD.
74 Taharoto Rd Takapuna
Auckland 0622 NZ
sharkclean.co.nz
NZ 0800 112 660

Illustrations may differ from actual product We are constantly striving to improve our products; therefore the specifications contained here in are subject to change without notice.

© 2026 SharkNinja Operating LLC. SHARK is a registered trademark in the United Kingdom of SharkNinja Operating LLC.

Apple App Store is a trademark of Apple Inc.

Google, Android and Google Play are trademarks of Google LLC.

 sharkclean.com.au | sharkclean.co.nz

© 2026 SharkNinja Operating LLC. Printed in China.

RV3000XANZ_Series_Warning_Insert_MP_Mv6